


Hifi Soundsystem in CIC

In case that you have the HiFi sound system (BMW option code 0676) you will have to make changes to the quadralock connector (the big connector block that goes into the CCC/CiC) to get some base from the speakers. (Woofer fix)

Since the CiC the outputs that interface with the CiC and amplifier have changed. This is a fix suggested by Patryk, Technic, GeorgieB and pclausen.

This is the Quadralock connector:

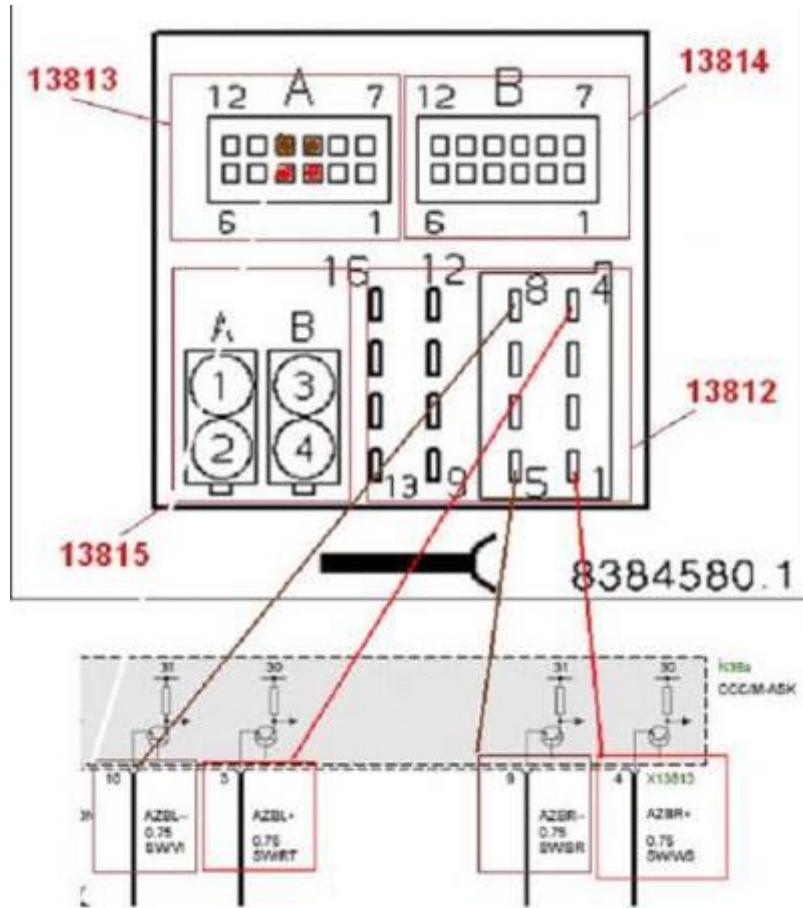

What you need to do is remove pins 3, 4, 9 and 10 from the 13813 block. Leave the pins in 13812 in their socket! Now using for example tap connectors you connect the loose wires that were in block 13813 to the wires in socket 13812 in the following order:

13813 (removed pins)	13812 (connect to these wires, DO NOT REMOVE PINS!!)
Pin 3	Pin 4
Pin 4	Pin 1
Pin 9	Pin 5
Pin 10	Pin 8